



INSTALLATION PROCEDURE FOR FLOOR BOARDS




A

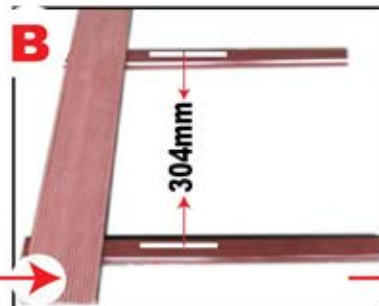

B

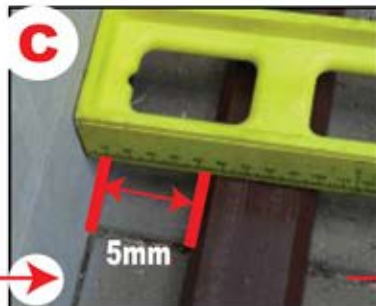

C

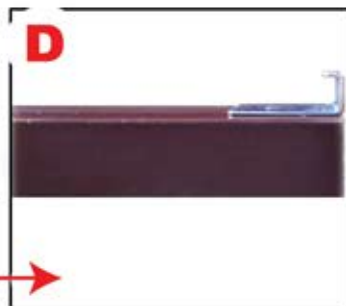


D

* If you have no existing Batten, predrill Keel on to subfloor. screw down stainless fitting for drill.


* Leave 304mm between Levelled Battens.

* leave a 5mm expansion gap from wall to Batten.

* Attach starter clip at the end of every Keel with a screw.

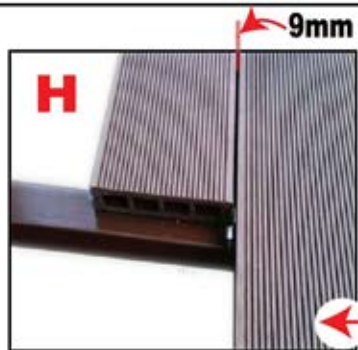


H

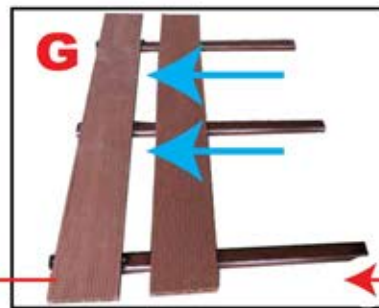

G



F

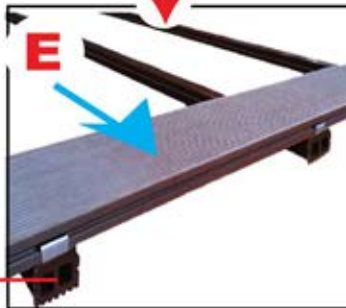

E

* Any spacer in the middle should be supported over the Keel or Battens.

* Slip next WPC Decking Board firmly up to the Spacer Clip.

* Attach the spacer clip to the other side of the WPC decking board. Then fix the Spacer Clip and screw down to the keel.

* Slip the first WPC Decking board firmly against the Starter Clip.